

Verde 'V'-Line Bunker Liner

Verde 'V' Line is a white artificial grass which has been developed specifically to hold Bunker Sand in place. The grass is made from a coarse polypropylene fibrillated yarn. This construction ensures that the artificial grass remains upright.

Verde 'V' Line sits in the base of the bunker, beneath the sand.



Verde 'V' Line Bunker Liner is designed to & suppress vermin damage as well as reducing stone, silt & clay contamination. The artificial grass has a draining latex backing, allowing excellent drainage. **The Verde 'V' Line** has a 20mm open pile and is typically supplied in bulk rolls which are 25.00m x 4.00m in size (100 sqm). Other sizes available on request.

The **Verde 'V' Liner** is designed to create the playing characteristics of a natural bunker, deadening the golf ball when it lands and preventing it from bouncing back onto the green.

Should the sand levels thin, the white tips of the grass will be discreetly exposed.

This still allows a shot to be played but alerts the staff that the sand needs topping up.


The Various Advantages of the Verde 'V' Line Bunker Liner

- Deadens Ball Bounce
- Saves Time & Money on Labour
- Minimises Sand Replacement
- Reduces Contamination
- Keeps Vermin at Bay
- Discreetly Highlights Low Spots
- Enables Continual Play When Sand Levels Are Low

TRIED ... 

TESTED ... 

PROVEN ... 

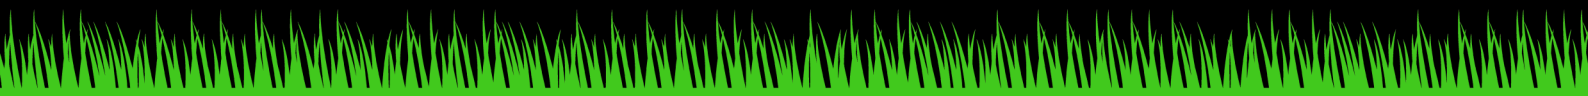

Verde 'V'-Line Installation Guide



- ✓ Remove mud or soft earth from the existing bunker. A maximum depth of 100mm should be sufficient. However if the bunker struggles with drainage, this should be addressed at this point. Re-establish levels using crushed aggregate 25mm to dust or similar. Compact with a plate compactor or roller.



- ✓ Roll out the **Verde 'V' Liner**, white side up so that it covers the base below. Make sure there are no creases or bumps in the grass to ensure a smooth Finish. Allow the **Verde 'V' Liner** to rest up the sides of the bunker, leaving a drainage channel at the top. Depending on the shape and size of the bunker, more than one piece may be required.



- ✓ Trim the **Verde 'V' Line** artificial grass by cutting from the back side with a sharp Stanley knife and a straight edge. Try to avoid cutting across the picks where possible, to prevent fraying and ensure a neat join. Pin in place with 100m galvanised nails. If more than one piece is required, ensure the grass is pulled tight and all edges are trimmed neatly prior to making the join.



- ✓ Whilst fitting the **Verde 'V' Liner**, make sure you leave a drainage channel around the perimeter. If your bunker requires a join, you can use our specialist Jointing Tape and Adhesive. Make sure the jointing tape is shiny side down, preventing water from penetrating through the tape. Following this, you will need to weigh down the joins to allow adhesive to set, ideally for 24 hours.



- ✓ Once the seams are secure, fill the bunker with sand, ensuring the tips of the grass are hidden beneath the surface.

Allow to settle and re-dress if required.

The installation should now be complete.